



1. Mark All Holes

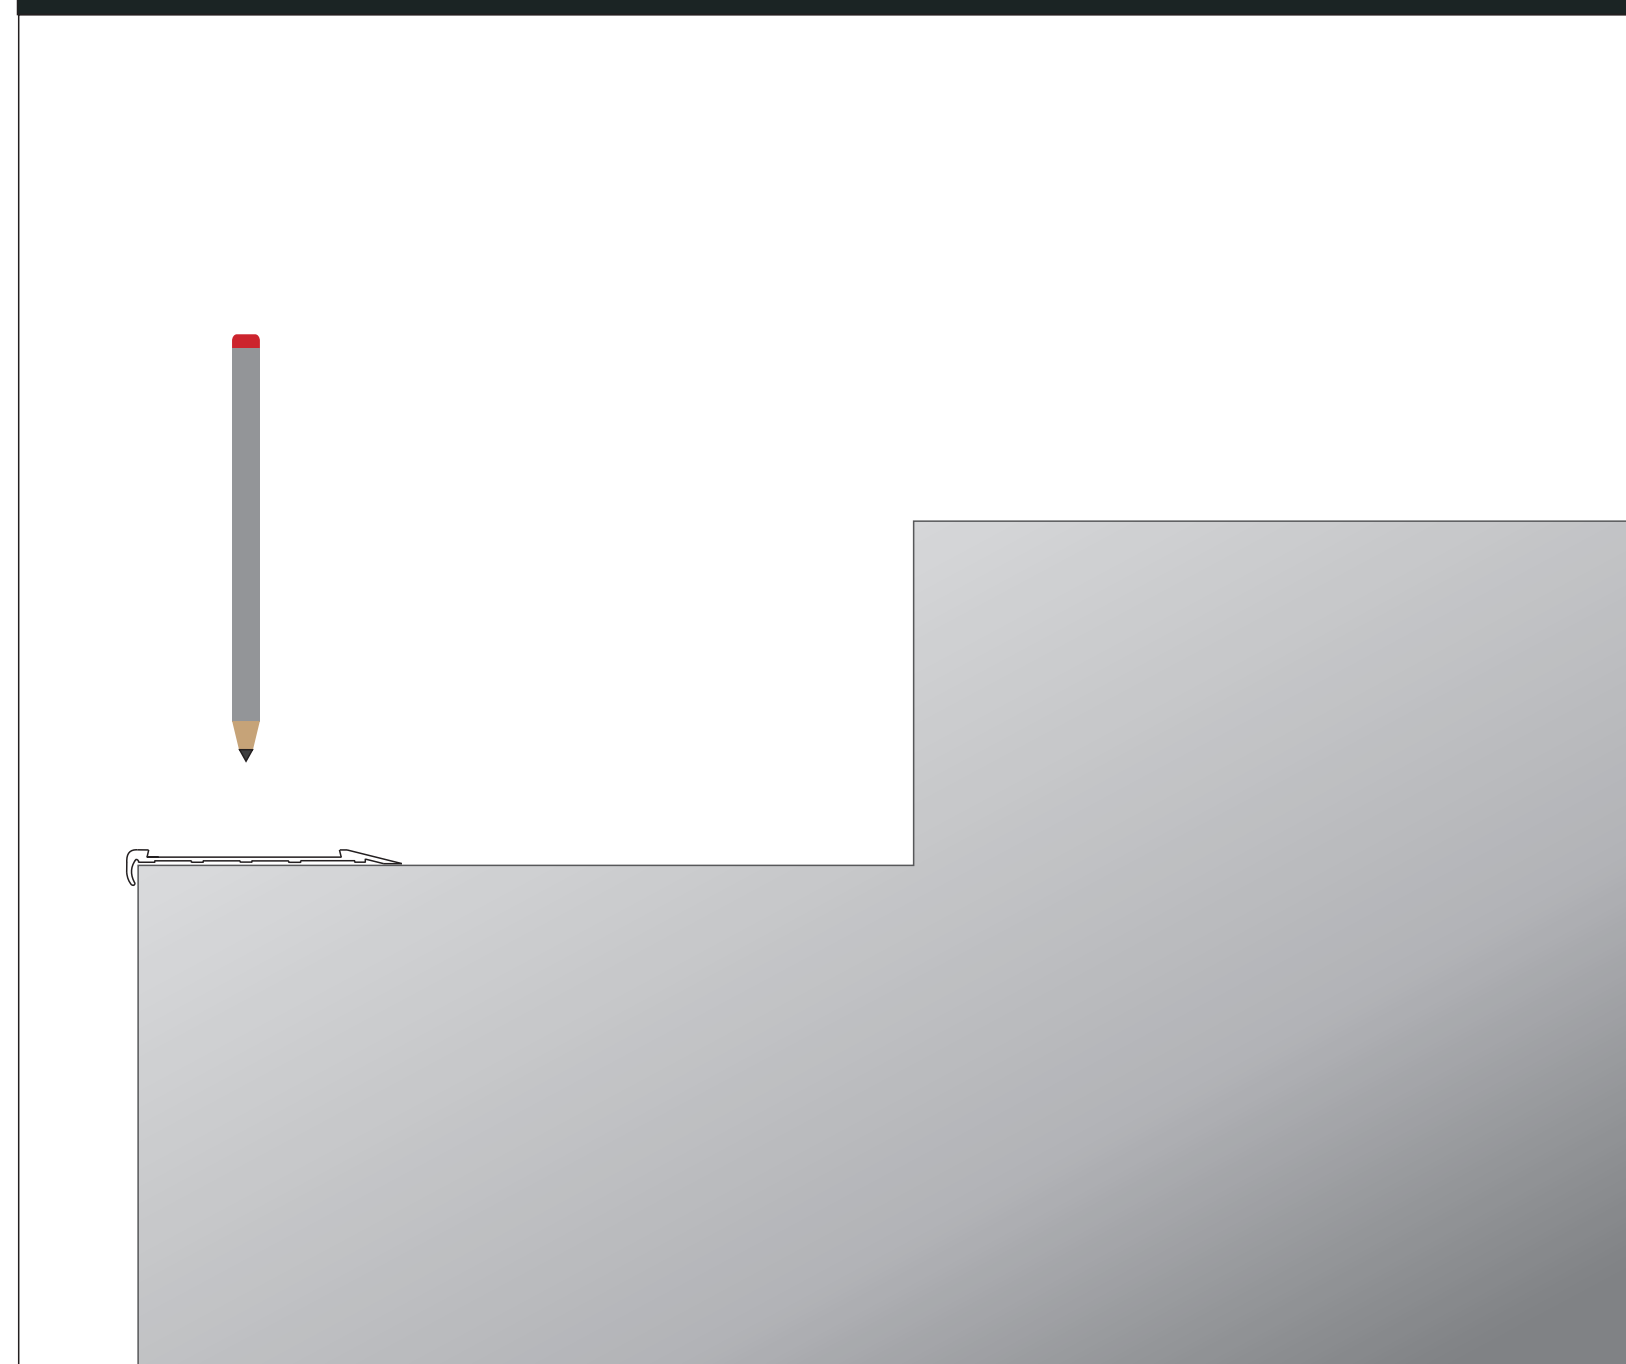

Prepare and clean surface
Marked the drilling holes spot on stairs


2. Drilling, Clean, Apply Adhesive

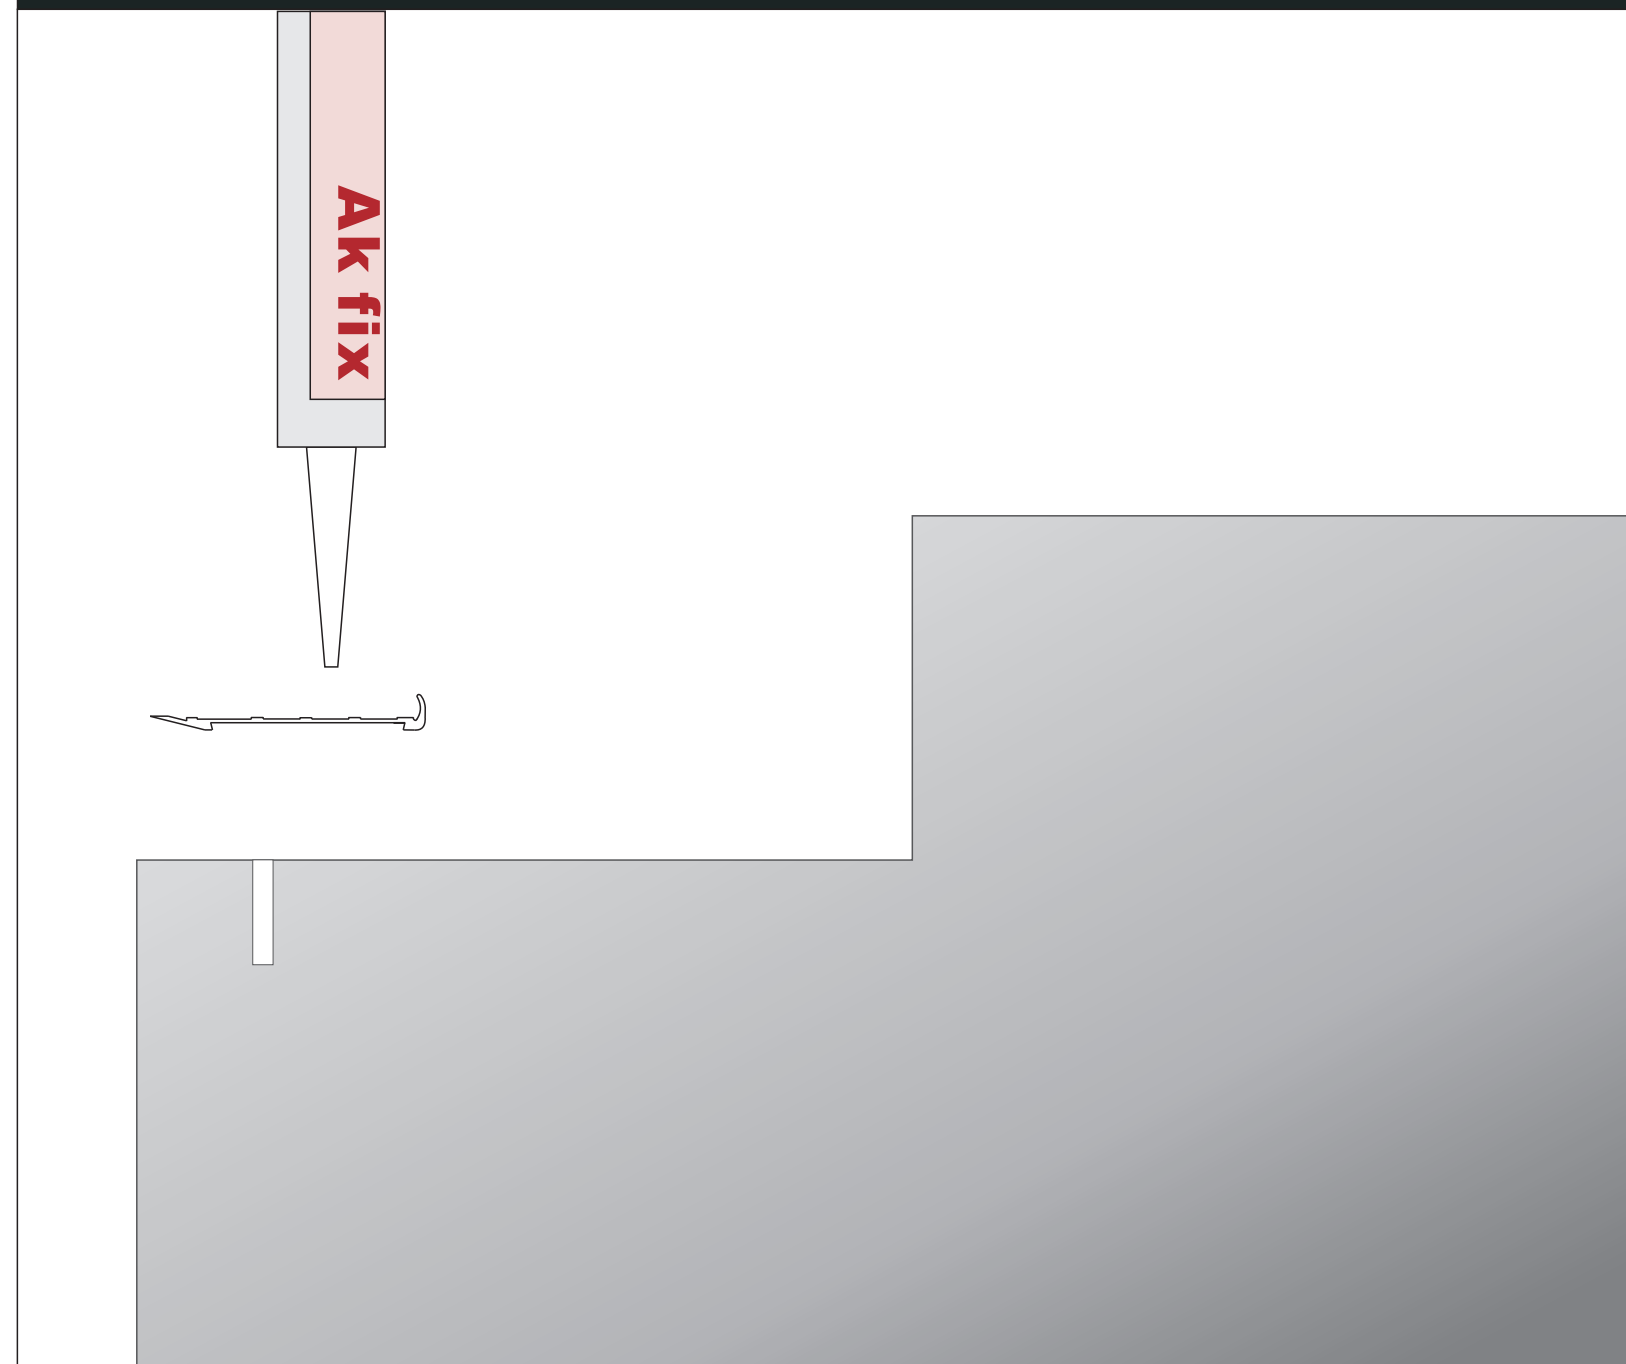

Drill holes with corresponding drill bit
- 7mm SDS drill bit on concrete surface (6-7mm screw plug)
- Timber flooring does not require screw plug.


Clean and remove dust
Apply adhesive on the back side of nosing

3. Apply Screw

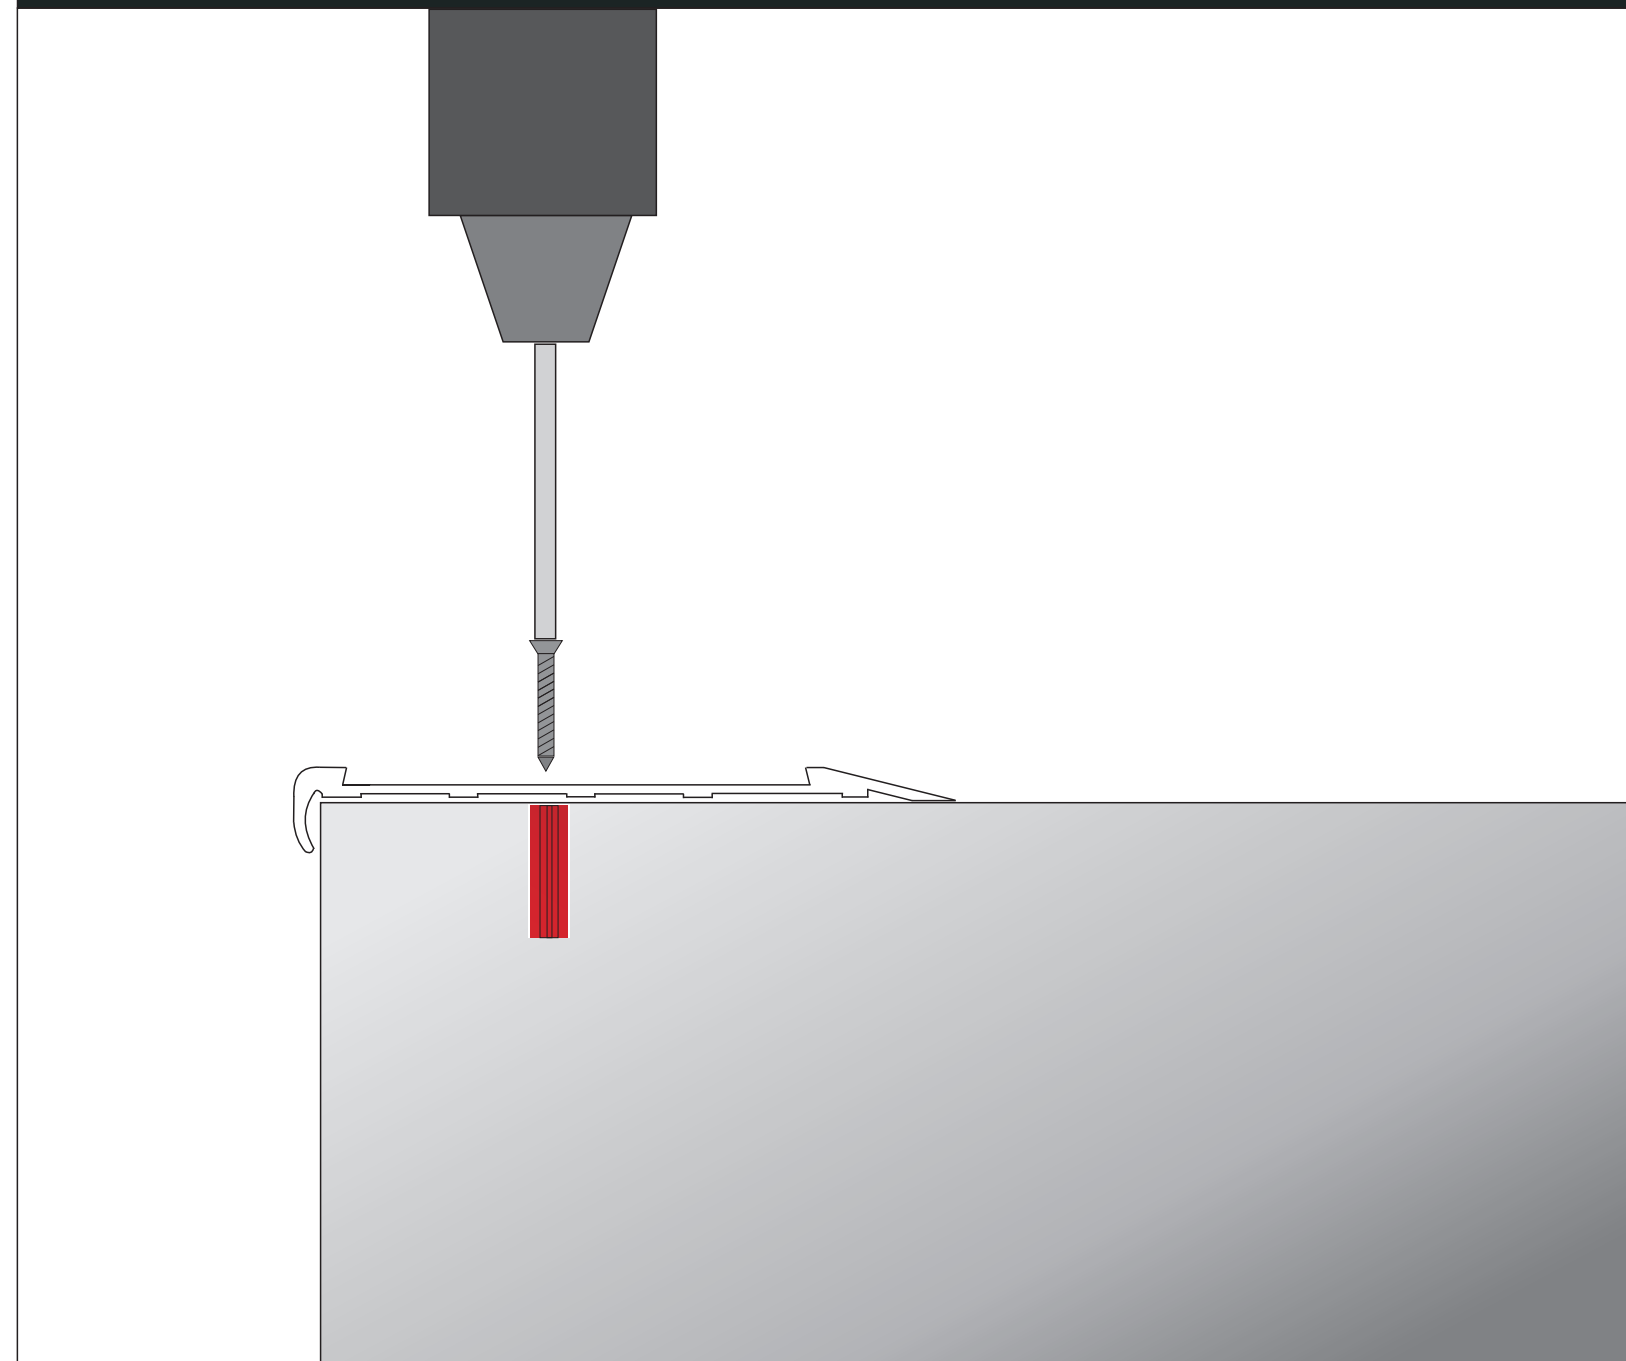

Apply supplied screws

4. Insert Anti Slip Bar

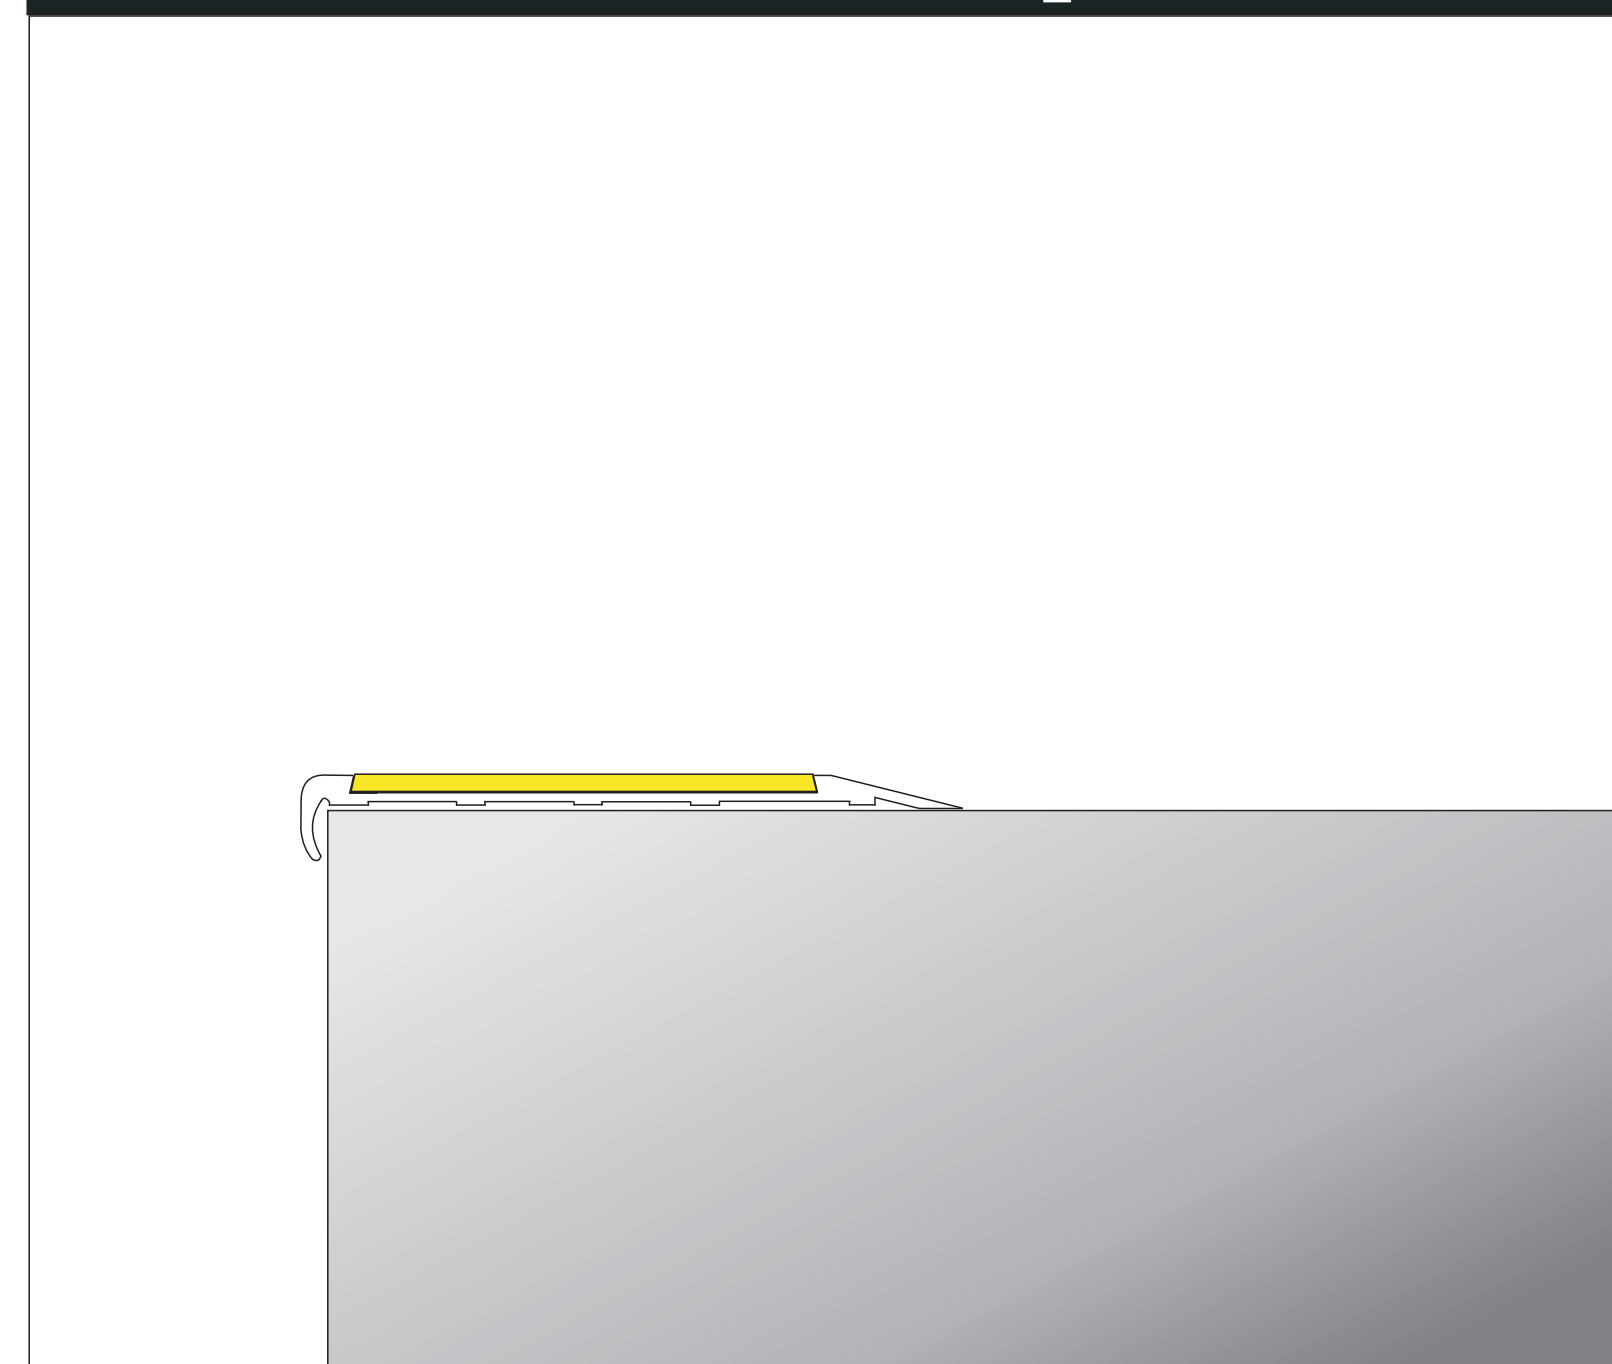

Insert bar can be applied by heavy duty double sided tape or using adhesive

Tips: Remove any excess adhesive with wet towel

Need More Advice ?

Contact 02 9790 2182 and tell us about your project,
Our expert team will be able to provide you the best solution.